

## **Elevation View**

## NOTES:


- 1. METER SETTING NOT TO BE OBSTRUCTED IN ANYWAY.
- 2. METER SETTING MUST BE COMPLETED BEFORE METER PIT WILL BE SET.
- 3. BACKFLOW PREVENTION DEVICE MUST BE TWP. APPROVED
- 4. BACKFLOW PREVENTION DEVICE INSTALLED AND MAINTINED BY OWNER.
- 5. PROVIDE PROPER DRAIN AT METER SETTING.

- 6. STRAINER IS HIGHLY RECOMMENDED UPSTREAM OF BACKFLOW PREVENTION DEVICE.
- 7. METER SPACING: A. 5/8" X 3/4" -12"

B. 3/4" - 13,5"

C. 1" - 15.5"

D. 1 1/2" - 18"

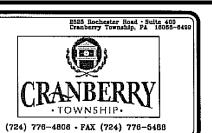

## **Standard Non-Residential Meter Detail**

REVISIONS				DRAWING
ND.	DATE	NO.	DATE	
ORIGINAL	7/17/03			
				SW-32
				5 * * 5 =
				i